 




PS15 CLIP

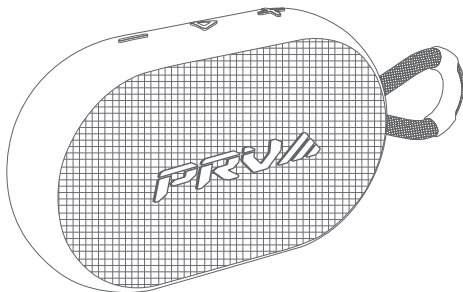 


USER MANUAL


RoHS CE FCC  

BLUETOOTH SPEAKER AND ACCESSORIES


- A: Bluetooth speaker
- B: Type-C charging cable
- C: User manual
- D: Clip

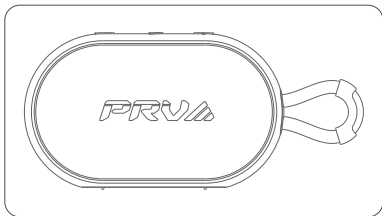


A

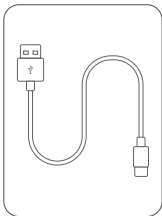 

B

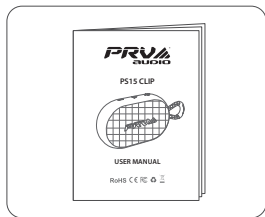 


C

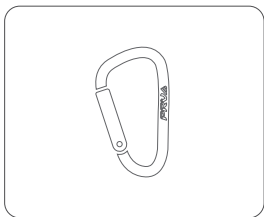 

D

 BASIC FUNCTION

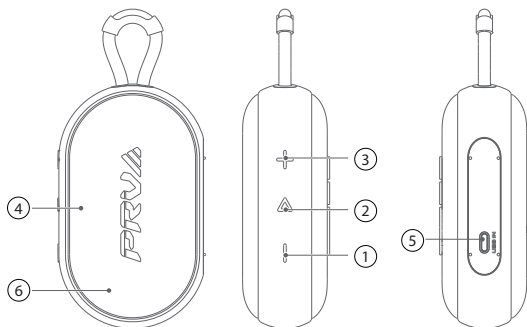

- ① — Short press 1 time: Volume -
Long press 2s: Last song
- ② ▶ Long press 2s: Power on/Power off
Short press 1 time: Pause/play/Pick up/Hang up the call
Short press 2 times: Protect call privacy/Reject incoming calls/TWS connect/TWS disconnect
Short press 3 times: Bluetooth disconnect
- ③ + Short press 1 time: Volume +
Long press 2s: Next song
- ④ 💡 Indicator Light
- ⑤ 🔌 Type-C charging port
- ⑥ 🎤 Microphone

 
 
OPERATION GUIDE

1. Power on/off

Long press "▶" for 2 seconds for power on, long press pressing again to power off.

2. Bluetooth Mode

After powering on, the speaker is on Bluetooth mode and automatically enters Bluetooth pairing status. The indicator light flashes blue. Turn on the Bluetooth device, search for "PRV PS15" and connect it. You will hear a voice prompt once it is connected, and the blue indicator light will stay on. Now you can start to play your music. Short press "▶" button 3 times to disconnect the Bluetooth.

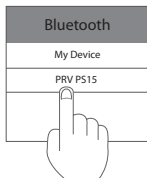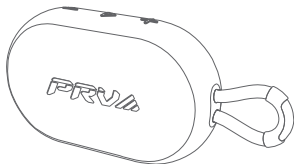

3. Operation on playing status

On the Bluetooth mode playback status, short press the "▶" button to pause the music, short press again to resume the playback status.

- Volume Control:

Short press the "+" button to increase the volume. Each press increases the volume by one level. The volume is set to a "beep~beep" tone, indicating that the volume has been set to maximum. Short press the "-" button to turn the volume down, each press decreases the volume by one level.

 
- Last /Next Song Control:

Long press "+" to the next song, long press "-" to the last song.

OPERATION GUIDE

4. TWS (True Wireless Stereo) connection


The speaker supports TWS connection function. Under the power-on status but no Bluetooth connection, short press "▶" button of both two "PS15 CLIP" speakers to turn on TWS pairing. There will be a voice prompt for successful pairing and the slave device's blue LED keeps on and the master one's blue LED flashes.

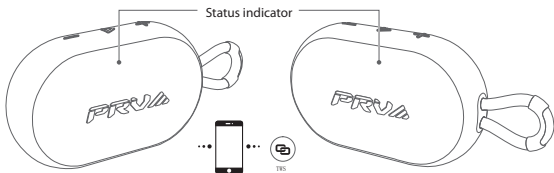

5. Call function

When there is an incoming call, the speaker will enter into hands-free mode automatically under Bluetooth connected status. Short press "▶" button to answer the call and short press it again to hang up. Short press "▶" button for 2 times to reject the call.

 Short press "▶" button for 2 times to transfer the call from the speaker to phone to protect your talking privacy.

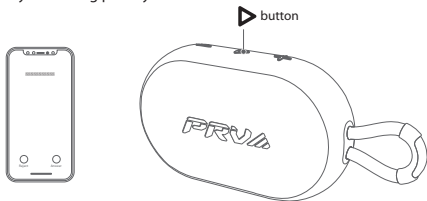

OPERATION GUIDE

 
6. Power Saving

If no devices are connected within 10 minutes the speaker will turn off automatically for power-saving.


7. Charging/Power Supply

Important note :

- Do not use power adapters without safety certification.
 - It is recommended to use an adapter in output 5V/1A (or above) to charge.
1. When you hear the low battery prompt tone, please charge the speaker as soon as possible.
 2. When charging, the red charging indicator light is on, and the indicator light will be off when fully charged.

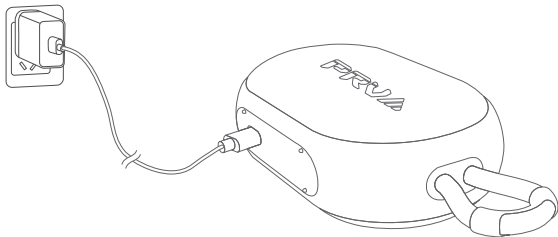

FUNCTION GUIDE

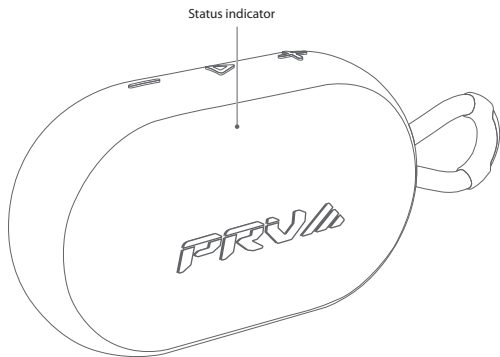 

Indicator Light	Bluetooth Mode: Blue
	Charging Status: Red
	Low Battery Status: Flashing Red

SPECIFICATIONS

Product Name	PS15 CLIP
Bluetooth Version	5.3
Battery Capacity	3.7V/2600mAh
Playing Time	15 - 20 hours (50% volume)
Talking Time	15 - 20 hours
Charging Time	4 hours
Charging Current	5V \equiv 1.0A
Speaker Unit	6W
Product Size	2.87" x 4.80" x 1.77" (73 x 122 x 45 mm)
Product Weight	0.45 lb (206.5g)

FREQUENTLY ASKED QUESTIONS

Q1: What kind of charger should I use for the speaker?

A: All common USB 5V chargers can be used, while we suggest 5V/1A or above 1A.

Q2: What if there is noise or intermittent sound during playing?

A: The speaker can be normally used within 30ft (10m) under no obstruction environment. If it is beyond 30ft (10m) or with any obstruction, there might be noise or intermittent sound.

Q3: Why does the speaker power off automatically after powering on without any operation?

A: When no bluetooth is pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.

Q4: Why doesn't the speaker connect to the once paired device?

A: First, remove the speaker's paired name from the cellphone's Bluetooth list and then restart pairing.

Q5: How to reset speaker in case it doesn't turn on?

A: Please plug in the charger and try in a few minutes or try to long press power button 10-20s to reset.

NOTES:

1. Please read this manual carefully before using the product and keep it properly.
2. Before the first use, please fully charge the product.
3. Please use a certified adapter that has passed national safety certification.
4. If you do not use the product for a long time, be sure to charge it once a month at least to maintain its performance.
5. In order to protect the internal circuit and the performance of your PRV Audio PS15 Clip, we recommend to avoid using the product in an extremely cold or hot environment, such as temperature beyond the range of -23°F to 95°F (5°C to° 35°C). If used beyond the above range, the product may stop automatically to protect the internal circuit.
6. When charging it in a high-temperature environment, the product may automatically stop charging to protect the battery.
7. Storage environment temperature: -23°F to 95°F (5°C to° 35°C)
RH (Relative Humidity) less than 70% (recommended 77°F± 9 (25°C± 5)).

Important safety instructions:

1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use it in dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls, it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long time charging.
8. The maximum ambient temperature should not exceed 104°F (40°C).

*This speaker supports mobile phones/ tablets/ PCs etc. This User Manual is illustrated based on mobile phones.

Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Model: PS15 CLIP
Battery: 2600mAh

FCC ID: 2BL5J-PS15CLIP



Warning: Changes or modifications made to this device not expressly approved by **PRV Audio** may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.