 




## PS36 MAGNET

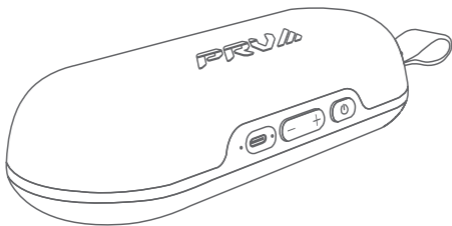

## USER MANUAL

 


# BLUETOOTH SPEAKER AND ACCESSORIES


A: Bluetooth speaker

B: Type-C charging cable

C: User manual

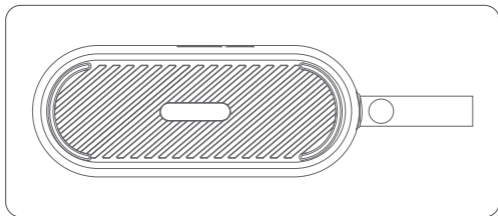

A

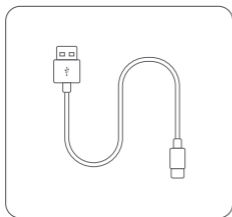 






B

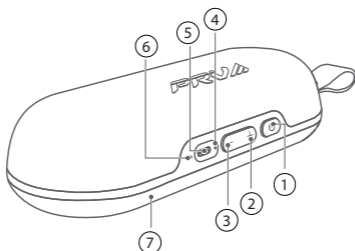 

C

## BASIC FUNCTION




- ① Long press 2s: Power on/off  
 Short press one time: Play/Pause; Pick up/Hang up call  
 Short press twice: Switch LED lighting mode  
 Short press 3 times: Protect call privacy; Reject incoming call; TWS connect/disconnect
- ② + Short press one time: Volume " + "  
 Long press 2s: Next song
- ③ - Short press one time: Volume " - "  
 Long press 2s: Previous song
- ②③ + - Short press : Quickly press + - at the same time to disconnect Bluetooth  
 Long press 2s at the same time: Turn on/off SOS light
- ④  Status indicator
- ⑤  Type-C Charging port
- ⑥  Calling MIC
- ⑦  LED light

 
# OPERATIONS

## 1. Power On/Off

Long press "  "button 2s to power on/off.

## 2. Bluetooth Mode


Long press the "  " button 2s to power on with a prompt tone, the speaker will enter into Bluetooth pairing mode, and the blue indicator will flash. Choose "PRV PS36" in your Bluetooth list, there will be a prompt tone once connected successfully, and the blue indicator will be normally on. Now, you can play music.

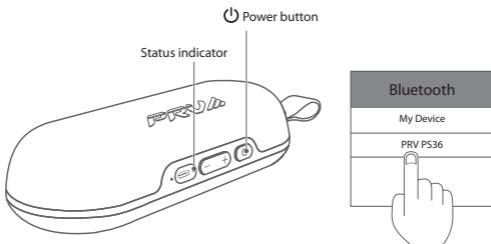

# OPERATIONS


## 3. TWS (True Wireless Stereo) Connection

 After powering on, but before connecting with any device, short press the "⏻" button 3 times on any speaker to turn on the TWS function, you will hear a prompt tone, and the blue indicator will flash. There will be a prompt sound like a "du" once paired successfully, then the blue LED of the slave speaker keeps on and the master one's blue LED flashes, now you can connect the master speaker to the device.

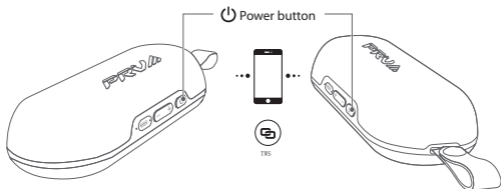

## 4. Volume Control

 Short press the "+" button one time for volume up, and there will be a prompt tone when up to maximum volume. Long press the "+" button 2s for next song. Short press the "-" button one time to volume down. Long press "-" button 2s for the previous song.

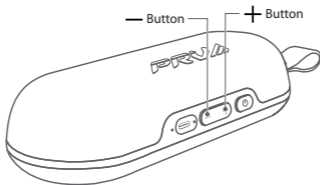

# OPERATIONS

## 5. LED Lighting Mode

After powering on, short press the "⏻" button twice to switch LED lighting mode:

Mode 1: Orange

Mode 2: Chasing Rainbow

Mode 3: Spotlight

Mode 4: Rainbow Snake

Mode 5: Flashing Rainbow

Mode 6: White

Mode 7: Off

 
Long press "⊕ ⊖" 2 buttons 3s at the same time to turn on/off SOS lighting.

## 6. Calling

When a call is coming, short press "⏻" button to answer. Short press "⏻" button 3 times to hang up.

When during a call conversation, short press "⏻" button to hang up.

Short press the "⏻" button 3 times to protect call privacy (move call to phone).

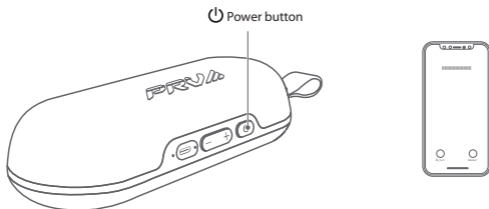

# OPERATIONS

## 7. Power Saving

The speaker will power off automatically to save the battery when nothing is connected after 10 minutes.

 
## 8. Charging

### **Important note :**


Use supplied USB-C charging cable

Use an output source 5V/2A (or above)

Charge when you hear low battery prompt tone or the indicator flashes red. The red indicator will be normally on while charging and switch off after fully charged.

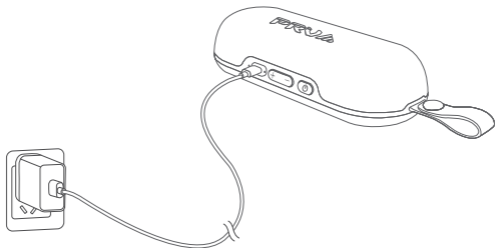

# FUNCTION INSTRUCTIONS

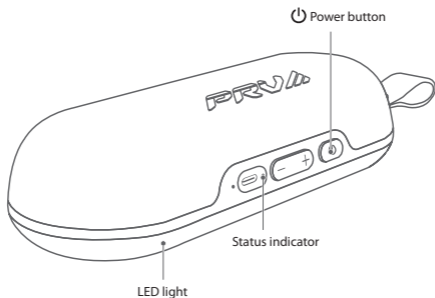 

<b>LED lighting</b>	Total 7 LED lighting modes
<b>Status indicator</b>	Power on/ TWS (blue indicator)
	Low battery (red indicator flash)
	Charging (red indicator normally on)
	Fully charged (red indicator off)

## SPECIFICATIONS

Product Name	PS36 MAGNET
Bluetooth Version	5.3
Battery Capacity	3.7V/3500mAh
Playing Time	10 - 11 hours (50% volume, LED lighting off) 4 hours (50% volume, LED lighting on)
Talking Time	10 - 11 hours
Charging Time	4.5 - 5 hours
Charging Current	5V $\approx$ 1A
Speaker Unit	8W x2
Product Size	7.83" x 3.15" x 1.85" (199 x 80 x 47.2 mm)
Product Weight	1.1 lb (500g)

## FREQUENTLY ASKED QUESTIONS

### **Q1: What kind of charger should I use for the speaker?**

A: All common USB 5V chargers can be used, while we suggest 5V/2A or above 2A.

### **Q2: What if there is noise or intermittent sound during playing?**

A: The speaker can be normally used within 30ft (10m) under no obstruction environment. If it is beyond 30ft (10m) or with any obstruction, there might be noise or intermittent sound.

### **Q3: Why does the speaker power off automatically after powering on without any operation?**

A: When no bluetooth is pairing in 10 minutes, the speaker will shut down automatically to reduce power consumption.

### **Q4: Why doesn't the speaker connect to the once paired device?**

A: First, remove the speaker's paired name from the cellphone's Bluetooth list and then restart pairing.

### **Q5: How to reset speaker in case it doesn't turn on?**

A: Please plug in the charger and try in a few minutes or try to long press power button 10-30s to reset.

## NOTES:

1. Please read this manual carefully before using and keep it properly.
2. For the first use, please fully charge the product.
3. Please use a certificated adapter that has passed national safety certification.
4. If you do not use the product for a long time, be sure to charge it once a month at least to maintain its performance.
5. In order to protect the internal circuit and the performance of your PRV Audio PS36 Magnet, we recommend to avoid using the product in an extremely cold or hot environment, such as temperature beyond the range of -23°F to 95°F (5°C to° 35°C). If used beyond the above range, the product may stop automatically to protect the internal circuit.
6. When charging it in a high-temperature environment, the product may automatically stop charging to protect the battery. At this time, the charging indicator usually flashes quickly to indicate that the charging environmental temperature or the product's internal temperature is too high.
7. Storage environment temperature: -23°F to 95°F (5°C to° 35°C)  
RH (Relative Humidity) less than 70% (recommended 77°F± 9 ( 25°C± 5)).

### **Important safety instructions:**

1. Do not disassemble or repair this speaker personally, otherwise, it may cause product damage or personal injury.
2. Do not use it in a dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or a place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged (such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls), it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long-time charging.
8. The maximum ambient temperature should not exceed 104°F (40°C).

\*This speaker supports mobile phones/ tablets/ PCs, etc. This User Manual is illustrated based on mobile phones.

# Federal Communications Commission (FCC) Statement.

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Model: PS36 MAGNET  
Battery: 3500mAh

FCC ID: 2BL5J-PS36MAGNET



**Warning:** Changes or modifications made to this device not expressly approved by **PRV Audio** may void the FCC authorization to operate this device.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

### **RF exposure statement:**

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.